


INSTALLATION PROCEDURE

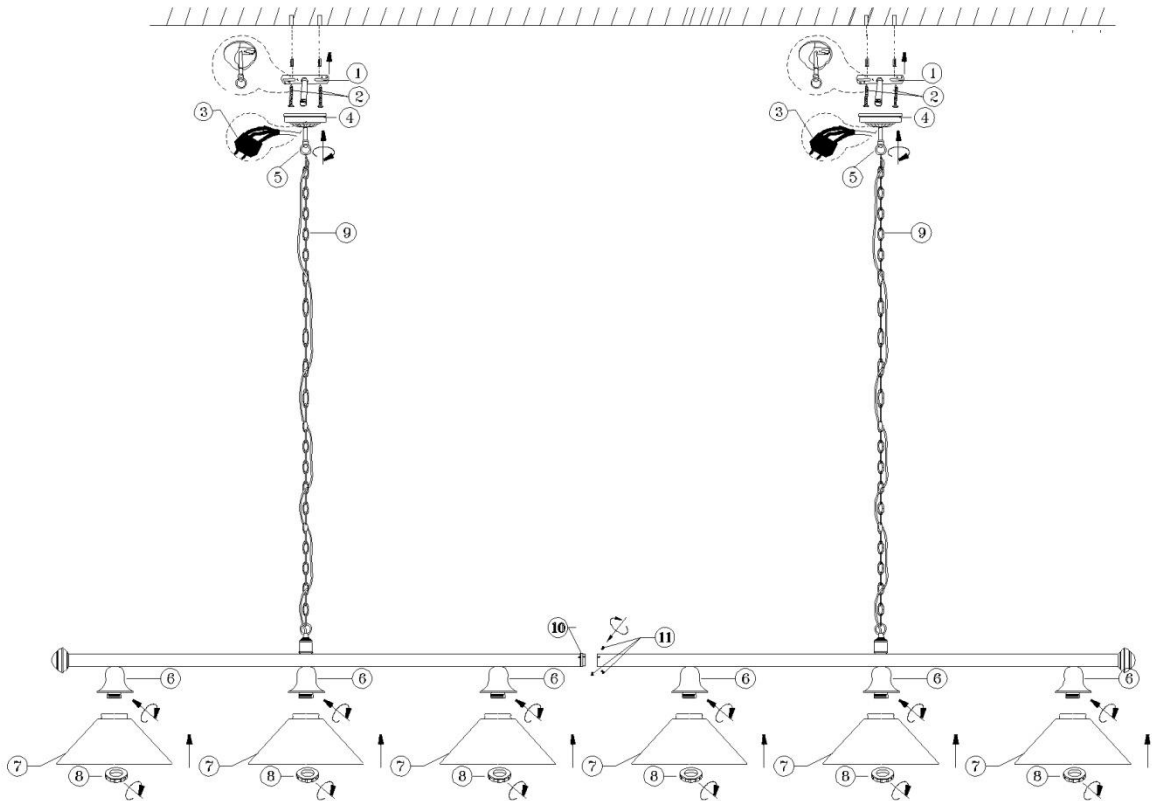

6 Shadeoflamp Installation procedure

Gently remove all parts from the package.

1. Drill hole on ceiling then nail into it.
2. Screw the bracket on ceiling.
3. Put electric plug through ceiling cover.
4. Screw the chain and nailcap.
5. Place the bolt through the nailcap, bolt the bracket and nailcap.
6. Connect the muse connect 10 and nuts 11
7. Plastic ring 8 the lampshade7 on shade cap6